



GEOBOMBAS
TECNOLOGÍA PARA FLUIDOS

CURVA DE DESEMPEÑO

ST - 05

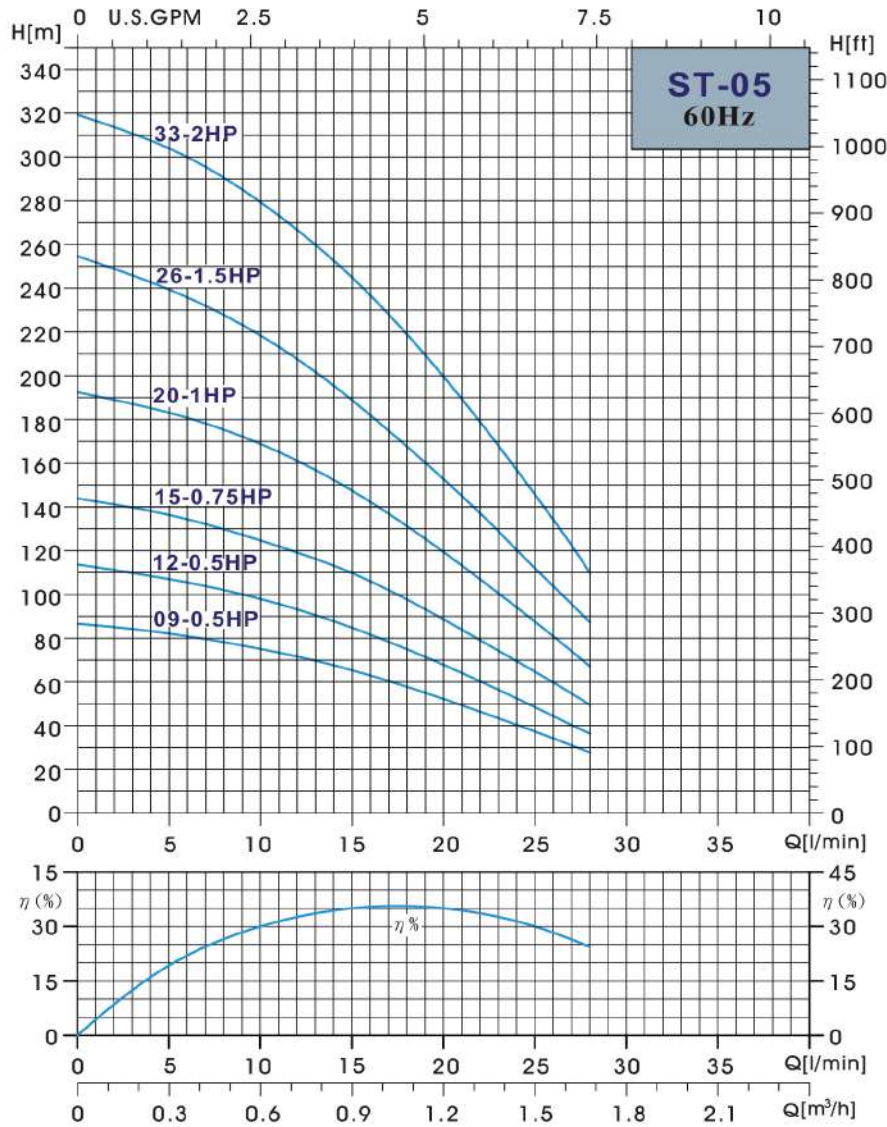


TABLA DE SELECCION																			
TIPO DE BOMBA	ETAPAS	Motor		Q = DESCARGA														BOMBA	
				l/min	10	15	20	25	30	35	40	50	60	70	80	90	100		
		KW	HP	m³/h	0.6	0.9	1.2	1.5	1.8	2.1	2.4	3.0	3.6	4.2	4.8	5.4	6.0		
		H = CABEZA TOTAL EN METROS														LONG. (mm)	PESO (kg)		
ST-0509	9	0.37	0.5	87	75	65	52	38	21								306	3.1	
ST-0512	12	0.37	0.5	114	98	85	68	49	28								359	3.6	
ST-0515	15	0.55	0.75	144	124	110	89	65	39								411	4.1	
ST-0520	20	0.75	1.0	193	169	148	120	88	53								499	4.9	
ST-0526	26	1.10	1.5	255	219	179	152	112	68								642	5.8	
ST-0533	33	1.5	2.0	320	280	245	200	145	82								757	7.3	