



GEOBOMBAS
TECNOLOGÍA PARA FLUIDOS

CURVA DE DESEMPEÑO

ST - 10

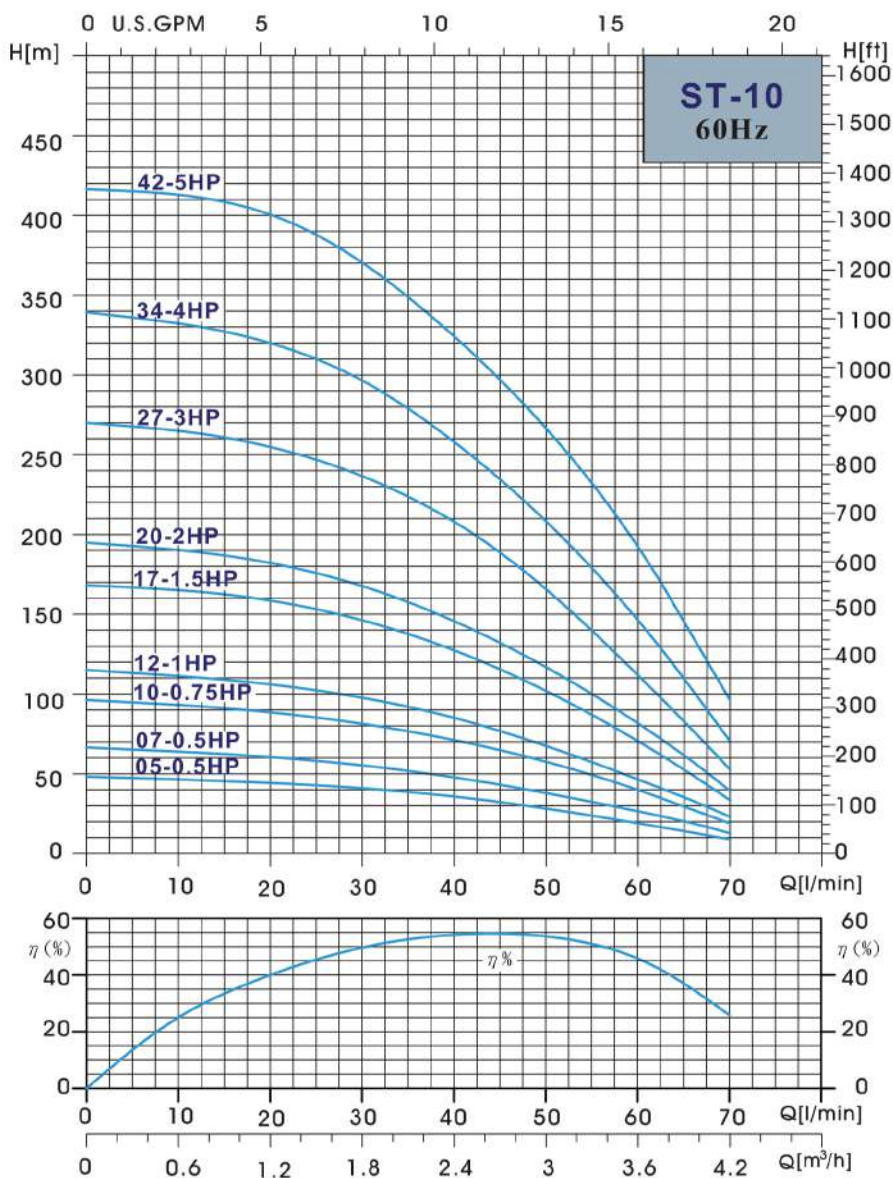


TABLA DE SELECCION

TIPO DE BOMBA	ETAPAS	Motor		Q = DESCARGA															BOMBA	
		KW	HP	l/min 0	10	15	20	25	30	35	40	50	60	70	80	90	100	LONG. (mm)	PESO (kg)	
				m³/h 0	0.6	0.9	1.2	1.5	1.8	2.1	2.4	3.0	3.6	4.2	4.8	5.4	6.0			
H = CABEZA TOTAL EN METROS																				
ST-1005	5	0.37	0.5	48			44	42	40	38	36	29	19	9				236	2.5	
ST-1007	7	0.37	0.5	67			60	58	55	52	49	39	27	13				271	2.8	
ST-1010	10	0.55	0.75	96			89	85	81	77	71	58	40	19				324	3.3	
ST-1012	12	0.75	1.0	115			106	102	98	92	85	68	47	23				359	3.6	
ST-1017	17	1.10	1.5	168			159	152	147	138	128	102	70	35				447	4.4	
ST-1020	20	1.5	2.0	195			181	177	168	158	146	118	82	40				499	4.9	
ST-1027	27	2.2	3.0	270			255	247	237	223	209	167	111	53				660	6.0	
ST-1034	34	3.0	4.0	339			320	310	296	280	259	209	146	70				758	7.5	
ST-1042	42	3.7	5.0	416			400	389	370	350	323	267	190	99				916	8.8	